

## 07- ECOSPOT® LINE

# ECOSPOT® DISHES GRILL/LC

**CHARACTERISTICS :** the formulation of this product contains high biodegradable active principles and it is phosphorus free

- suited to remove charred and difficult greases;
- high saponifying power;
- suited for oven, cooking plates, hoods, frying pans, pots;
- specific for food and preserving industry;
- **NOT USEFUL ON ALUMINIUM.**

**DILUTION :** prepare 5% to 10% solution (500 ml – 1 l product in 10 l water), according to the kind of grease to remove;  
do not dilute the product, when used on heavily encrusted equipment.

**USE :**

- 1) spray the active foam over the surface to clean; *the product is more reactive on warm surfaces at 50°C / 60°C;*
- 2) allow the product to react;
- 3) rinse with a lot of water.

### Labelling according to Regulation (EC) No 1272/2008:

**Hazard statement** **Danger** Causes severe skin burns and eye damage.

**Code(s):**



**Precautionary statements:** Wear protective gloves/protective clothing/eye protection/face protection.  
IF SWALLOWED: Rinse mouth. Do NOT induce vomiting.  
IF ON SKIN (or hair): Take off immediately all contaminated clothing. Rinse skin with water [or shower].  
IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing.  
Immediately call a POISON CENTER/doctor.  
Dispose of the product/container in accordance with existing regulations.

**Contains:** potassium hydroxide.

**UFI: QYE3-K0JQ-U00X-VD5Q**

**Safety data sheet available on request for professional users**

Rev. 2.0 on 27/04/2023

CODES : 103005CK012A051